


Let there be light ...
...with new light handle device



Kraus & Naimer
BLUE LINE switchgear

Q120

Discrepancy Switch

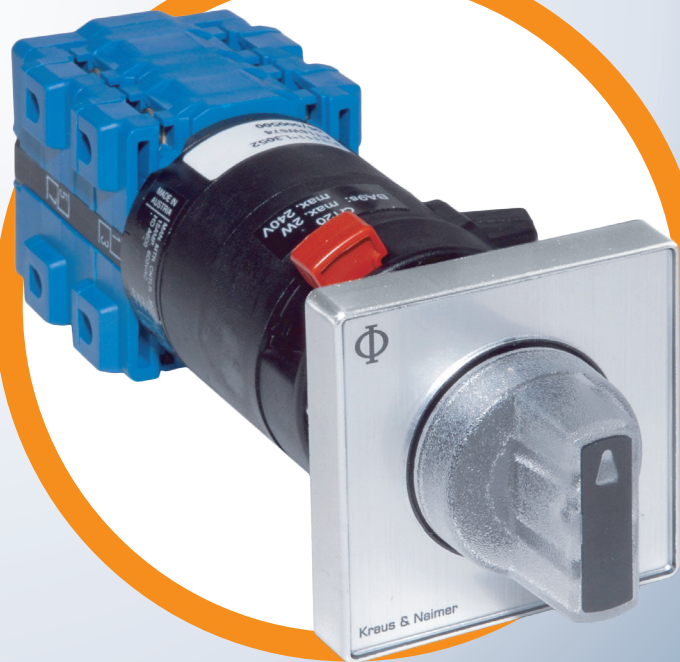


- ▶ No Mounting tool
- ▶ Spring loaded locking ring
- ▶ Handle available in crystal as well as translucent
- ▶ 360° switching angle
- ▶ Easy handling with single hole mounting
- ▶ IP42 Dust - and waterproof
- ▶ Exchangeable BA9s lamp

The bulbs are not included in the scope of supply. LED bulbs are recommended.

Kraus & Naimer has developed a new control and indicator device to meet the end-user requirements of robustness and simplification of use. Now, you, no longer, need a tool for mounting and disassembling, the head is easily clipped and unclipped from the body due to a spring loaded locking locket that ensures the locking automatically.

We also increased the IP degree, gave you the possibility of 360° switching angle to extend possible functionalities, make compatible with a drilling diameter of 22.5 mm, and changed the handle to a crystal design.

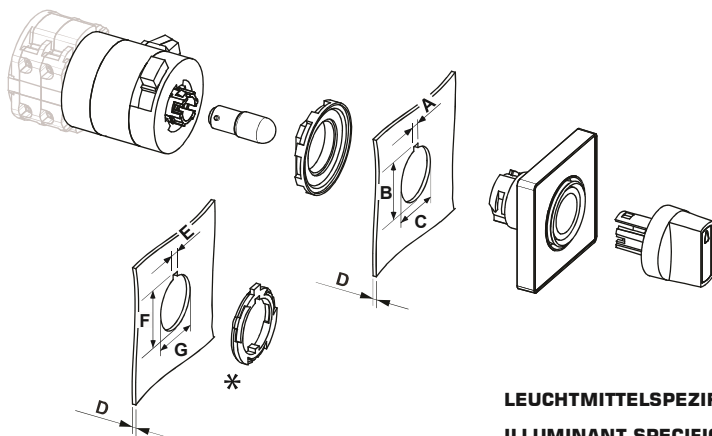


A	3,2 mm
A+	0,2 mm
A-	0 mm
B	24,1 mm
B+	0,4 mm
B-	0 mm
C	22,3 mm
C+	0,4 mm
C-	0 mm
D≤	6 mm
E	4,8 mm
E+	0,2 mm
E-	0 mm
F	33 mm
F+	0,5 mm
F-	0 mm
G	30,5 mm
G+	0,5 mm
G-	0 mm

LEUCHTMITTELSPEZIFIKATION

ILLUMINANT SPECIFICATION


Nennspannung	Leistung	Socket	Länge	Durchmesser
Rated Voltage	Wattage	Socket	Length	Diameter
max. 240 V	max. 2 W	BA9S	≤ 28 mm	≤ 10 mm

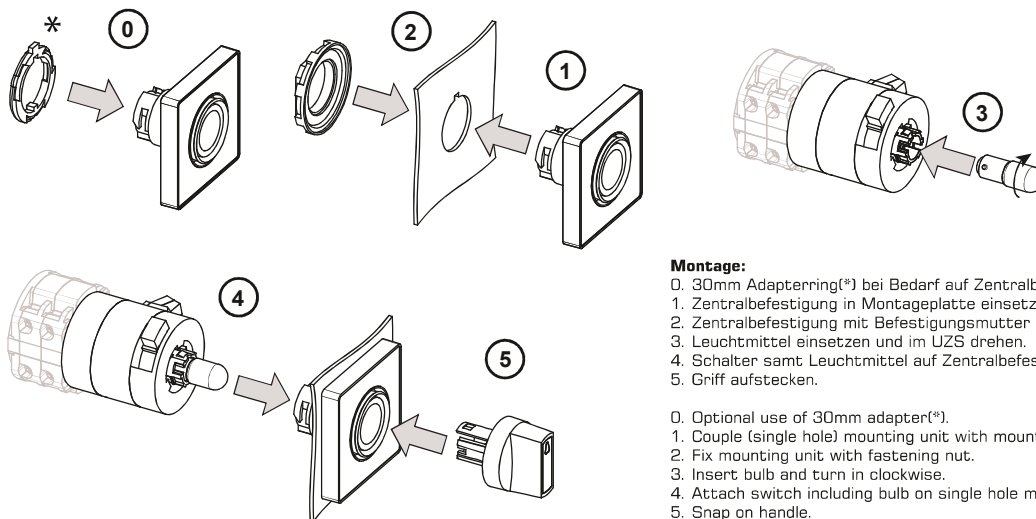

Montage:

0. 30mm Adapterring(*) bei Bedarf auf Zentralbefestigung aufsetzen.
1. Zentralbefestigung in Montageplatte einsetzen.
2. Zentralbefestigung mit Befestigungsmutter befestigen.
3. Leuchtmittel einsetzen und im UZS drehen.
4. Schalter samt Leuchtmittel auf Zentralbefestigung aufsetzen.
5. Griff aufstecken.

0. Optional use of 30mm adapter(*).
1. Couple (single hole) mounting unit with mounting plate.
2. Fix mounting unit with fastening nut.
3. Insert bulb and turn in clockwise.
4. Attach switch including bulb on single hole mounting.
5. Snap on handle.

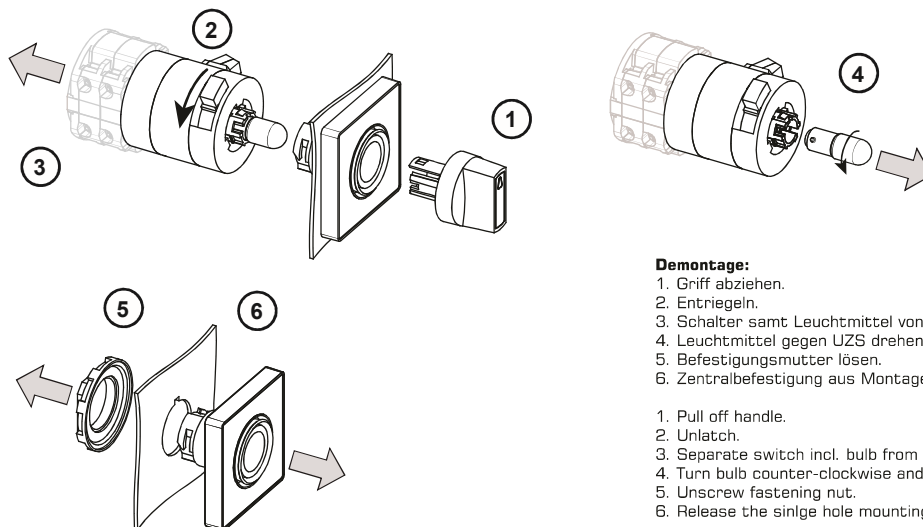

Demontage:

1. Griff abziehen.
2. Entriegeln.
3. Schalter samt Leuchtmittel von Zentralbefestigung trennen.
4. Leuchtmittel gegen UZS drehen und entnehmen.
5. Befestigungsmutter lösen.
6. Zentralbefestigung aus Montageplatte lösen.

1. Pull off handle.
2. Unlatch.
3. Separate switch incl. bulb from single hole mounting.
4. Turn bulb counter-clockwise and remove.
5. Unscrew fastening nut.
6. Release the single hole mounting unit.